



TETON

Natural Reliability™

XPRC3

Pump Remote

INSTRUCTION MANUAL



VERSION
MAY 2024

Teton Dynamics
P.O. Box 1044
San Leandro, CA 94578-0031

MODEL
XPRC3

WELCOME TO THE WORLD OF TETON, NATURAL RELIABILITY™!

You Made The Right Choice Investing In This Quality Product. Thank You And Enjoy.

www.tetonus.com

800.752.0399

info@tetonus.com

BEFORE USING THIS PRODUCT, PLEASE READ THESE INSTRUCTIONS CAREFULLY AND FAMILIARIZE YOURSELF WITH THE UNIT. PLEASE KEEP THESE INSTRUCTIONS IN A SAFE PLACE FOR FUTURE REFERENCE.

WARNING

DO NOT splice, repair or modify. Unplug when not in use. Fully insert plug. DO NOT use damaged remote sets. Inspect periodically. Use within the electrical rating marked on the remote set. DO NOT plug more than a total of 1875 watts in this remote set. If watts are not marked on appliance, multiply ampere rating (on nameplate) by 125 to determine equivalent watts. Add determined watts for each plugged-in appliance or lamp (sum of watts on bulbs) to find total watts being used. Operating temperature range – 30°C (-22°F) to 45°C (113°F). Let the switch hang downward so moisture doesn't accumulate in the outlet. Install cord and unit above ground level with the receptacle in the downward position. Suitable for damp locations. Not for water immersion or for use where directly exposed to water. Store indoors when not in use.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- Only use the batteries specified and be sure to match the + and - polarity markings.
- Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
- Remove exhausted or dead batteries from the product.
- Remove batteries if product is not to be used for a long time.
- Do not dispose of batteries in fire. Batteries may explode or leak. As with all small items, these batteries should be kept away from children. If swallowed, seek medical attention immediately.

INSTALLATION

- ① Select a location.
- ② It is recommended to mount the receiver at least 6" from the ground using the built in mounting bracket to prevent exposure to water in case of flooding. (All outdoor devices should be plugged in to a GFCI electrical outlet to prevent electrical shock.)

Countdown Mode: Turn Devices on immediately for 2, 6, 8 hours

Photocell Mode: Turn Devices on at dusk for 2, 6, 8 hours or until dawn

Repeat function: repeats set program daily

TRANSMITTER FEATURES

Countdown Mode:

- ① Make sure the sliding mode switch is in the COUNTDOWN position.
- ② ON- Power will turn on instantly and stay on until the device is powered off. The [ON] indicator on the front panel will illuminate.
- ③ OFF- Power will turn off instantly. All indicators on the front panel will turn off.
- ④ 2HR, 6HR, 8HR: When pressed, power is on instantly and will turn off after the 2 hour, 6 hour or 8 hour selected countdown time. The corresponding 2HR, 6HR, 8HR indicators on the front panel will illuminate. All indicators will turn off after the program is completed.
- ⑤ Dusk/Dawn: When pressed, the unit will power [ON] at dusk and turn [OFF] at dawn one time. The Dusk/Dawn indicator on the front panel will illuminate. All Indicators will turn off after program is completed.
- ⑥ Repeat Switch: When the sliding switch is in the repeat [ON] position the unit will repeat the last 2HR, 6HR, 8HR, or Dusk/Dawn program daily. The power on time will be the same as the last set time. The unit will power off after the last selected countdown time. The repeat indicator on the front panel will illuminate as well as the selected countdown time, until repeat mode is cancelled. To cancel repeat mode, you must slide the repeat switch into the repeat off position and press a desired function button. (Note: Sliding the repeat button without pressing a corresponding function button will not initiate or cancel the repeat function.)

Photocell Mode:

- 1 Make sure the sliding mode switch is in the photocell position.
- 2 ON-Power will turn on instantly. The power will turn off at dawn automatically. The ON indicator on the front panel will illuminate.
OFF-Power will turn off instantly. All light indicators on the front panel will turn off.
- 3 2HR, 6HR, 8HR: Power will be turned on at dusk and off after the 2 hour, 6 hour or 8 hour selected countdown time. (Note: If dawn comes before the selected countdown time has expired, the unit will turn off at dawn.) The corresponding 2HR, 6HR, 8HR indicators on the front panel will illuminate. All indicators will turn off after the program is completed.
- 5 Repeat Switch: When the sliding switch is in the repeat 'on' position unit will repeat the last 2HR, 6HR, or 8HR program daily. The unit will power on at dusk and will power off after the last selected countdown time. The repeat indicator on the front panel will illuminate as well as the selected countdown time until repeat mode is cancelled. (Note: Sliding the repeat button without pressing a corresponding function button will not initiate or cancel the repeat function.)

Manual Control

- 1 Press the button on the front panel of the Groundstake to override the current ON/OFF status until the next remote operation. If you press the [OFF] button, the unit will revert back to the last programmed setting.

Notes: If you are experiencing interference between 2 devices. Please, follow the instructions below:

CHANNEL SELECTOR:

The back of your transmitter is equipped with a channel selector switch to prevent interference between devices around your home. To prevent interruption between 2 devices, set your transmitter to an alternate channel. Transmitter channel codes are as follows: A, B, C, D.

Location: Peel off the sticker located above the word "channel" on the back of the transmitter to expose the channel selector switch.

Be aware that every time a channel is changed Command1 Transmitter Pairing is required. See instructions to your below.

COMMAND1 TRANSMITTER PAIRING

Note: Your Command1 Transmitter and receiver contained in this package are pre-programmed and ready to use. Command1 Pairing is only required for using additional transmitters.

This unit is equipped with patented command 1 technology. All Westinghouse indoor and outdoor transmitters have the ability to be paired with all Westinghouse indoor and outdoor receivers. Please follow the directions below to pair a transmitter to your receiver.

- 1 Locate the power [ON/OFF] button on the receiver.
- 2 Press and hold the power button for 3 seconds. The LED power indicator will begin to flash slowly.
- 3 On your transmitter, press [ON] wait 2 seconds and then press [OFF]. The LED indicator will now stop flashing.
- 4 You have successfully paired the transmitter to your receiver.

Resetting the Unit:

You can reset and remove all paired transmitters on your receiver by doing the following:

- 1 Press and hold the ON/OFF button for 3 seconds. The LED indicator will begin to flash slowly. Continue to hold for an additional 3 seconds. The LED indicator will now begin to flash rapidly. Release the ON/OFF button for 1 second and press once again to confirm reset. The LED indicator should now be OFF.
- 2 Your unit has now been reset and does not have any paired transmitters. (Note: After reset, pairing is required to use the transmitter shipped in this package.)

LIMITED PRODUCT WARRANTY

- CMT Group LLC, a California limited liability company d/b/a Teton™ (the “Company”) expressly warrants to the original purchaser that, for a period of one (1) year from the date of sale, the covered product (the “Product”) will be reasonably free of defects in materials and workmanship and that when properly handled, will conform, within accepted tolerance to applicable manufacturing specifications. This Limited Product Warranty (“Limited Warranty”) only applies to Company’s Products that are used, stored, handled, and installed in the manner recommended by the Company in the Product instruction manual.
- Notwithstanding this Limited Warranty, customer acknowledges that some parts of the Product are consumable and may need to be replaced as part of ongoing Product maintenance, as recommended in the Product instruction manual, and are therefore not covered by this Limited Warranty.
- Company will, at its option, repair or replace Product without charge, if the Product fails or does not perform as warranted solely due to a manufacturing defect within the warranty period, subject to the exclusions set forth in this Limited Warranty.
- Repair or replacement during this one (1) year warranty shall not include: reasonable labor charges necessary to repair or replace the defective Product, shipping costs, and packing and insurance costs. During the entire one (1) year warranty, Company’s obligation as to repair or replacement shall further be limited to repair or replacement with the models of the Product that are available at the time of the repair or replacement, and shall be limited to the repair or replacement of only the specific Product that fails due to a manufacturing defect. Any repaired or replaced Product shall also remain subject to the original one (1) year warranty from the date of the original sale, and any repair or replacement shall not extend the original warranty period in any manner or start a new warranty period.
- You may obtain coverage under this Limited Warranty by providing Company with proof of original purchase. For service under this Limited Warranty, you must first contact the seller, distributor, retailer, or dealer from whom you purchased the Product and provide the following: copy of original receipt, your name and address, a description of the Product (including the serial number/date code set forth on the Product), and the nature of the defect. To expedite any warranty claims and processing, please submit to us the product registration card included with your purchased Product promptly after your purchase.
- All warranty repairs must be performed by the Company, or a Company authorized third-party. Any repairs performed by you or an unauthorized third-party will not be compensated by Company and are not the responsibility of the Company and will void this warranty.
- **DISCLAIMER OF WARRANTIES:** Company’s Products must be stored, handled, installed, used, and maintained in accordance with instructions provided by Company, and this Limited Warranty is conditioned upon compliance with all such instructions. Copies of the Company’s use guide/care guide are included with the Product and available from the Company at the address listed below. You may also obtain these materials by contacting Company at (800) 752-0399 or on the Company’s website www.tetonus.com.
- This Limited Warranty does not cover defects caused by:
 - non-compliance with Company’s use guides, care guides, and/or instruction manual. Such failures include, but are not limited to, exposure to physical abuse, including, but not limited to chemical abuse (e.g. harsh cleansers and solvents), thermal abuse or shock (e.g. excessive heat or cold), incompatibility of fluid used near the Product, or misuse;
 - improper storage, installation, handling, and/or use of the Product;
 - damage not resulting from manufacturing defects that occur while the Product is in the customer’s possession;
 - unreasonable or unintended use of Product;
 - products installed with known or visible manufacturing defects at the time of installation;
 - minor conditions such as stains, scratches, etc.
- Any information or suggestion by Company with respect to the Products concerning applications, specifications, or compliance with codes and standards is provided solely for your convenient reference and are made without any representation as to accuracy or suitability. You must verify and test the suitability of any information with respect to the Products for your specific application.
- **THE WARRANTIES SET FORTH IN THIS LIMITED WARRANTY ARE THE ONLY WARRANTIES MADE BY COMPANY IN CONNECTION WITH THE PRODUCT. COMPANY CAN NOT AND DOES NOT MAKE ANY IMPLIED OR EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, AND DISCLAIMS ALL OTHER WARRANTIES, INCLUDING, BUT NOT LIMITED TO, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. PRODUCTS SOLD BY COMPANY ARE SOLD ONLY TO THE SPECIFICATIONS SPECIFICALLY SET FORTH BY COMPANY IN WRITING. OTHER THAN THE LIMITED WARRANTY SET FORTH HEREIN, COMPANY MAKES NO OTHER WARRANTIES, EXPRESS OR IMPLIED. COMPANY’S SOLE OBLIGATION UNDER THIS WARRANTY SHALL BE REPAIR OR REPLACEMENT OF NON-CONFORMING PRODUCTS. BUYER ASSUMES ALL RISK WHATSOEVER AS TO THE RESULT OF THE USE OF THE PRODUCTS PURCHASED, WHETHER USED SINGULARLY OR IN COMBINATION WITH ANY OTHER PRODUCTS OR SUBSTANCES.**
- **LIMITATION OF LIABILITY:** No claim by the buyer/owner of any kind, including claims for indemnification, shall be greater in amount than the purchase price of the Product in respect to which damages are claimed. IN NO EVENT SHALL COMPANY BE LIABLE TO BUYER/OWNER IN TORT, CONTRACT OR OTHERWISE, FOR ANY SPECIAL, INDIRECT, INCIDENTAL, CONSEQUENTIAL, RELIANCE, STATUTORY, SPECIAL, PUNITIVE OR EXEMPLARY DAMAGES, INCLUDING, BUT NOT LIMITED TO, LOST PROFITS, LOSS OF USE, LOSS OF TIME, LOSS OF REVENUES, INCONVENIENCE, LOSS BUSINESS OPPORTUNITIES, DAMAGE TO GOOD WILL OR REPUTATION, OR LOSS OF DATA, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR SUCH DAMAGES COULD HAVE BEEN REASONABLY FORESEEN, IN CONNECTION WITH, ARISING OUT OF, OR AS A RESULT OF, THE SALE, DELIVERY, SERVICING, USE OR LOSS OF USE OF THE PRODUCT SOLD HEREUNDER, OR FOR ANY LIABILITY OF BUYER TO ANY THIRD PARTY WITH RESPECT THERETO.
- All provisions of this Limited Warranty are severable and if any provision shall be deemed invalid, the remaining provisions shall remain in full force and effect.
- Please consult your retailer for quality original Company replacement parts.
- Visit www.tetonus.com for your nearest dealer.
- Contact Information:
 - Any question concerning this warranty should be addressed to:
Teton
P.O. Box, 1044
San Leandro, CA 94577
Phone: 800-752-0399
Email: info@tetonus.com
Website address: www.tetonus.com